

### ESCORT 160/200 SELECTION WALLBOX


The new Hazel Grove Music Escort Wallbox combines the proven reliability of the stylish 'Escort' with the latest micro-processor control electronics.

The single board computer is at present compatible with no less than 10 types of Juke Box and Hideaway, using the 7 programming cards provided.


These are:

	UNIT	INTERFACE REQUIRED (IF ANY)	NUMBER STRIPS	
			Traditional	Hi Tech
1.	Rowe-Ami Electro-Mechanical 120	(Using Ami C.G.A. Stepper or H.G.M. Electronic Stepper)	14-057	14-153
2a.	Rowe-Ami Electro-Mechanical 200 up to R80	(Using Ami C.G.A. Stepper or H.G.M. Electronic Stepper)	"	"
2b.	Rowe-Ami Electronic 200 up to R83	(Using code Ami convertor kit 2-15336-06)	"	"
*2c.	Rowe-Ami Electronic 200 R84 onwards	(Using Ami Wallbox interface kit 2-66965-02)	"	"
3.	Wurlitzer 160	(Using Wurlitzer Stepper 40143 or Wurlitzer Remote Selection Adaptor 40060A)	14-152	14-157
4.	Wurlitzer 200	(Using Wurlitzer Stepper 40143 or Wurlitzer Remote Selection Adaptor 40060A)	14-151	14-156
5a.	RockOla Electro-Mechanical 160	(Using RockOla Stepper 1769)	14-058	14-154
5b.	RockOla Electronic 160	(Using RockOla Wallbox Converter 1775)	"	"
6.	N.S.M. 160	(Direct Connection, includes H.G.M. Hideaway)	14-057	14-153
7.	N.S.M. 200	(Direct Connection)	14-150	14-155


\* A special version of the Escort is available for direct connection to the R84.

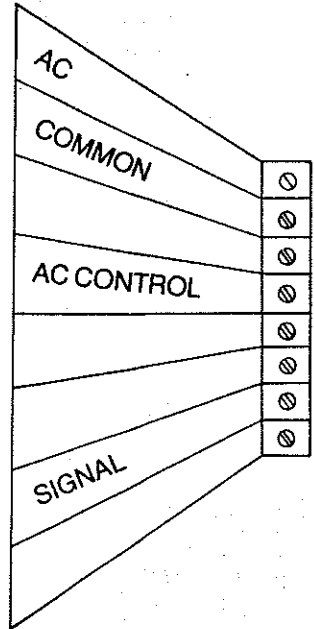


**IMPORTANT**  
THE PROGRAMMING CARD  
IN THIS WALLBOX MUST BE  
**ROWE-AMI**

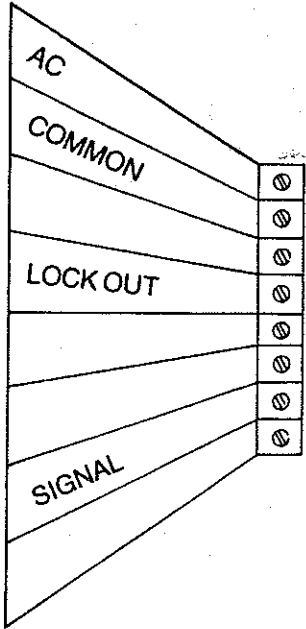

**IMPORTANT**  
THE PROGRAMMING CARD  
IN THIS WALLBOX MUST BE  
**ROCK-OLA**

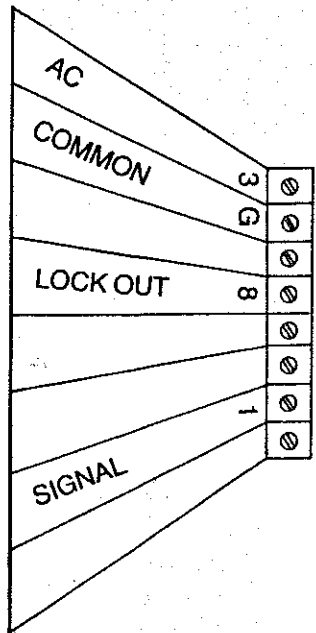

**IMPORTANT**  
THE PROGRAMMING CARD  
IN THIS WALLBOX MUST BE  
**WURLITZER**

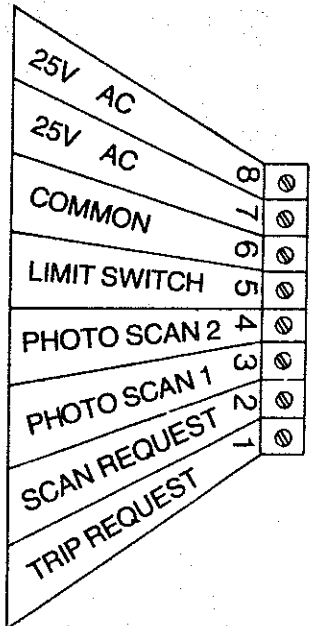

**IMPORTANT**  
THE PROGRAMMING CARD  
IN THIS WALLBOX MUST BE  
**N.S.M.**

Fig 1

## PROGRAMMING YOUR ESCORT WALLBOX

You will find supplied with each Escort seven programming cards. These cards, when plugged into the main P.C.B. "tell" the computer which type of programme to run and also link up the correct input and output circuits for that programme.

**ALWAYS CHECK THAT THE CORRECT PROGRAMMING CARD IS INSERTED BEFORE CONNECTING YOUR ESCORT TO THE JUKE BOX (OR HIDEAWAY)**

Also supplied are four labels depicting the correct connections for each type of box, i.e. AMI, ROCK-OLA, WURLITZER and NSM. To programme your Escort to another type of box, plug in the correct programming card and stick the appropriate connection label under the 8-way connection block on the main P.C.B.

**PLEASE NOTE:-** Because Escort title pages are designed to match the main equipment (so that no conversion charts are necessary), you will probably require a replacement title rack when reprogramming your wallbox.

## FREE CREDIT

An engineer or collector may establish credit on the wallbox using the credit pushbutton, regardless of the price setting switches, so price of play setting must be checked using coins.

To remove surplus credit from the wallbox, simply press the reset button on the main P.C.B.

## FREE PLAY

Sometimes it is convenient for an engineer, or for a promotional night perhaps, to have your wallbox on free play. If switch 4 on sb3 is in the 'on' position, then the credit display on the wallbox shows F.P. and selections may be made at will until the switch is reset.

## AUTO PLAY

Switches 1, 2 and 3 on sb3 give auto play at 5, 10 and 20 minute intervals respectively, on any type of juke box. Only one switch should be selected at a time, since the 5 min. switch overrides the 10 min. switch and 10 min. switch overrides the 20 min. switch.

**NOTE:-** When more than one wallbox is connected to the same equipment, only one wallbox needs to be set for Auto Play.

## PRICE SETTING

On the top right hand side of the P.C.B. are the 16 Price Programming Switches, 10 on sb1 and 6 on sb2

