



MICRO SWITCH AND CAM ADJUSTMENT

Cycle of the record mechanism is controlled by the operation of three micro switches actuated in the proper sequence by a rotating cam shaft.

To adjust, phonograph must be in stand-by position (gripper arm over record magazine), and the service scan switch moved to "off".

1. Rotate the knurled end of the gripper motor shaft counterclockwise until a jam occurs.

2. The No. 1 switch lever must remain seated in the bottom of the cam groove. If it is cammed out, loosen the two cam set screws and rotate the cam until the proper position is obtained.
3. The micro switch "make" and "break" should occur in the center of the cam dip. The switch lever has a set screw arrangement for adjustment purposes. This adjustment prevails for the three micro switches.